

Compact Hot Roller Press Machine 720W For Battery Cell Making

Our Product Introduction

for more products please visit us on lithiumbatterymachine.com

Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Certification: CE
- Model Number: MR-JS100
- Minimum Order Quantity: 1 Set
- Price: Negotiable
- Packaging Details: Standard Export Wooden Packing
- Delivery Time: 7-20 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 500 sets per month



Product Specification

- Product Name: Hot Roller Press Machine
- Roller: Dia 96 X W200mm, Other Width Available
- Roller Hardness: >HRC62
- Pressing Thickness: 0~2mm Adjustable
- Feeding Speed: Max 10mm/s Adjustable
- Heating Temperature: RT~ 120 Adjustable digital Display
- Working Voltage: AC110/220V Optional Upon Request
- Power: 720W
- Highlight: **Compact Hot Roller Press Machine,
Hot Roller Press Machine 720W**

Product Description

Battery Research Equipment Hot Roller Press Machine for Battery Cell Making

Model: MR-JS200

Applications:

MR-JS200 Hot roller press machine is a compact hot rolling press machine mainly serves for pressing samples in the lab or other applications in the material research especially for increasing active material density of the electrode in Li-Ion batteries research after coating.

The hot roller press machine has 200mm width steel rollers. Such a roller can be heated up to 130°C.

Main features


- * Heating and rolling, the temperature control of the thermostat is adjustable, and it is displayed by numbers.
- * Optional heating or no heating to work.
- * The roll has high hardness and hard chromium plating on the surface. The hardness can reach HRC62 and rust prevention.
- * Adopt the inclined block to adjust the gap of the tablet, which has good self-triviality and high adjustment precision.
- * High precision of rolling, the cylindricity of the roller is $\leq \pm 2\mu\text{m}$.
- * Vertical design, convenient for feeding and rolling of sheet material.
- * Use gear meshing rotation to achieve roll pressing.
- * The thickness and speed of the tablet can be adjusted, and the appearance is exquisite and beautiful.
- * Electric rolling, forming automation, can be forward & reverse operation.
- * Small size, easy to operate, flexible and fast to use.

Specifications:

Model	Electric Hot Rolling Press Machine MR-JS200		
Rolling Size	96mm(Dia.) x 200mm(W)		
Rolling Speed	5-40mm/s or 0.3 - 2.4 Meter/ Minute adjustable		
Roller Gap	0-2mm adjustable Gap width gauge accuracy: $\pm 10\mu\text{m}$ (0.01mm)		
Minimum Thickness	Depending on the electrode's material and thickness, typically: A 0.16mm thick electrode coated on copper can be pressed into a minimum thickness of 0.1 mm A 0.06mm thick electrode coated on copper can be pressed into a minimum thickness of 0.04 mm A 0.33mm thick silver/gold can be pressed into a minimum thickness of 0.03 mm		
Heating Temperature	130°C maximum Temperature Control: Precision temperature controller with $\pm 1^\circ\text{C}$ Accuracy		
Rate Voltage	AC 110 - 240V Single phase, 50/60Hz		
Power Consumption	720W		
Surface Hardness of Rollers	HRC60-62 Never roll materials with hardness > 50HRC (bench top rolling press is not suitable for calendaring thick metals.)		
Dimensions	500mm(L) x 220mm(W) x 320mm(H)		
Net Weight	55kg		
Shipping Dimensions	600*280*380mm		
Shipping Weight	75kg		
Application Notes	Important announcement (please read this before place the order) The MR-JS100 roller is specially designed for battery R&D in terms of its advantages as affordable, compact and precise. Please strictly follow the instructions to operate Must use ace tone to clean rollers' surface after each use Never rolling material with hardness > 50HRC If the machine will be idle for a long period of time, please apply anti-rust lubricant on the rollers The minimum thickness of the rolled sheet should depend on the physical property of the material. Here are some results from our test:		
	Electrode	Size	Original thickness
	LiFePO4 double sides	50mmW*260mmL	0.205mm
	LiMn2O4 double sides	50mmW*260mmL	0.205mm
	Copper foil + graphite (single side)	75mmW*240mmL	0.09mm
	Finished thickness		
	0.09mm		
	0.09mm		
	0.04mm		
	This rolling press can be used to make free-standing 2D metal nanosheets by a repeated process of folding and calendaring stacked metal sheets		


Warranty	One year limited warranty with lifetime support Rusting and damage due to improper storage condition or maintenance are not covered by warranty
Warnings	<p>Do not touch the surface of the rolling part of the machine when the rollers are heated up or running.</p> <p>Due to the influence of working environments, the temperature on the roller surface may be different from the display on the controller.</p> <p>Never roll materials with hardness > 50HRC</p> <p>Multi-step thickness calendering needed: While calendering the sample sheet, make each calendering decrement of 0.02mm comparing with sheet original thickness.</p> <p>Never calendering decrement over 0.02mm comparing with original sheet thickness each calendering.</p> <p>In order to prolong the lifespan of the roller bearings, regular lubrication is recommended.</p> <p>Clean roller surface for each rolling and Use ace tone to clean and lubricate when not in use to avoid corrosion</p> <p>This rolling machine can be used under Ar gas</p> <p>It is not allowed to use any MRBEST product in any hazardous location, especially prohibit from using in Class I environments (flammable gasses & vapor)</p>
Standard Package	one set of hex wrenches, 2 pieces of dial gauge, 1 feeler gauge

Picture for Reference

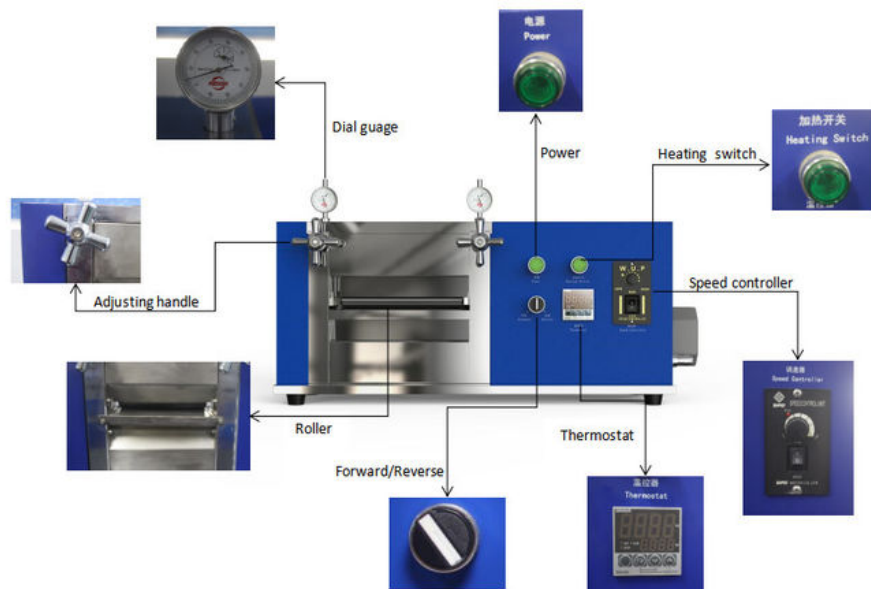

Thermostat

Make the temperature more accurate

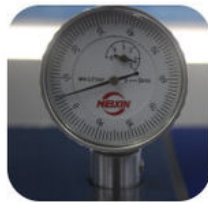

Dial gauge

Matching with adjusting handle, easy to observe the rolling gap

Adjusting handle

Easy to control the roller gap



Speed controller

Rolling speed is adjustable





Pouch Cell Assembly Machines




Cylindrical Cell Machine



Coin Cell Machines

MRBEST Factory Show

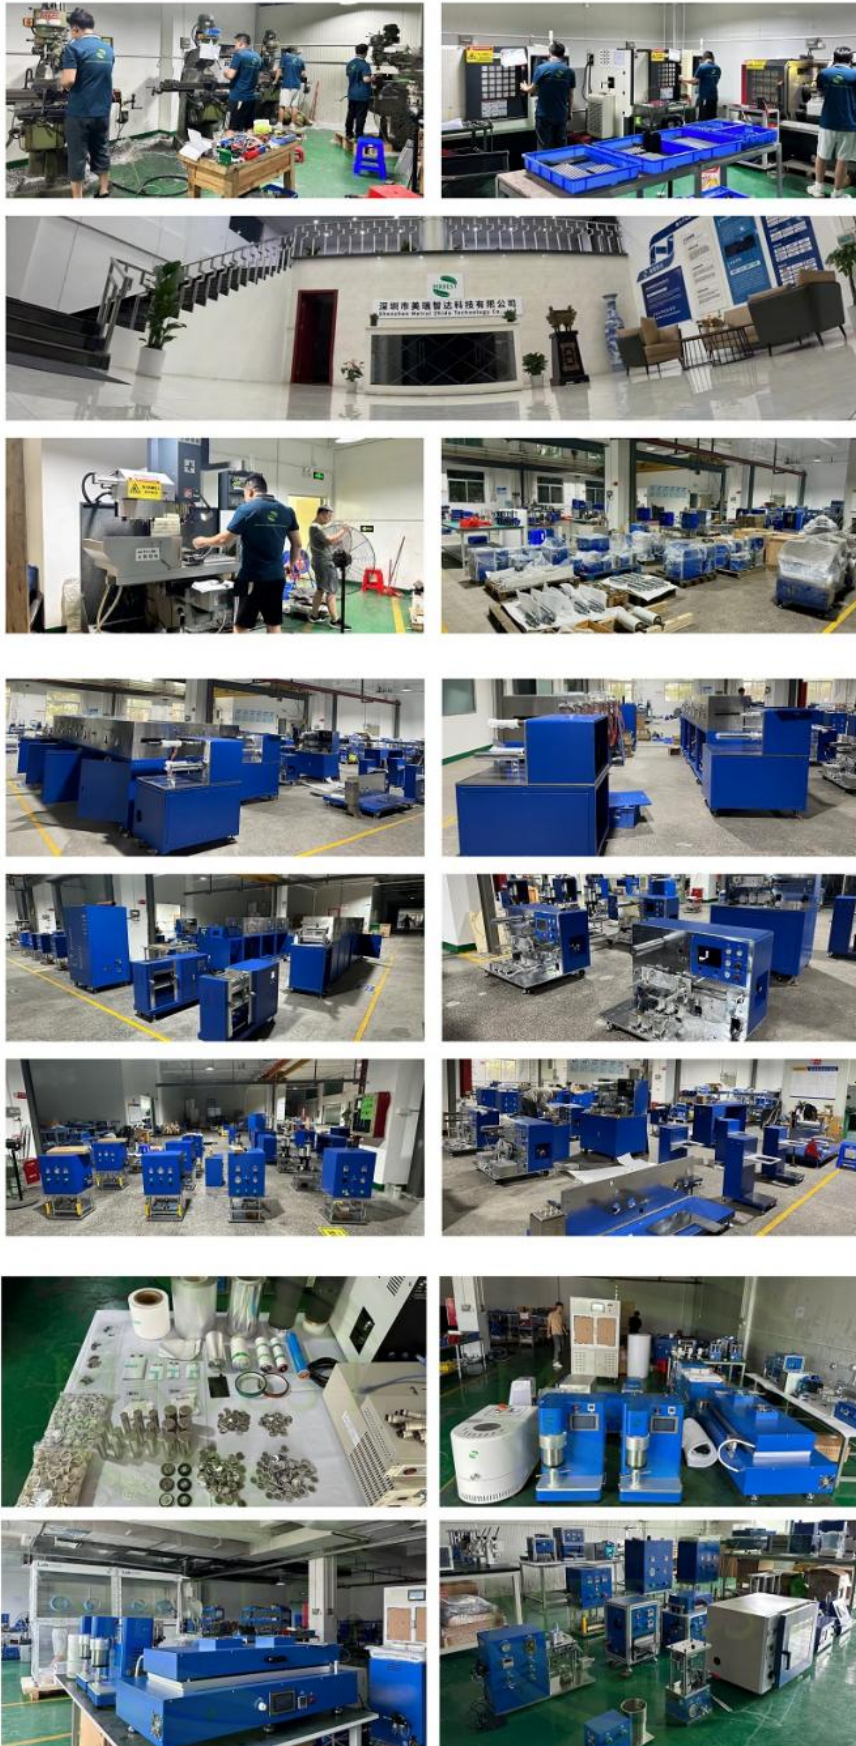

Shenzhen Meirui Zhida Technology Co., Ltd
Manufacturer Vendor for Lithium Battery Equipment in Shenzhen China
MRBEST Engineers has over 20 years experience in Lithium-ion Battery Researching and Manufacturing!
MRBEST International Sales Team has over 10 years export experience
24*7 Online after-sale dept and quick response!
Provide complete solution for Battery & Material Research Equipment
MRBEST Factory with ISO Certificate and products are CE approved



Shenzhen Meirui Zhida Technology Co., Ltd.



+86 19866156608



tina@szmrbest.com



lithiumbatteryemachine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China