

25W - 40W Cylindrical Cell Machine Semi Automatic Winding Machine

Our Product Introduction

Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Certification: CE
- Model Number: MR-JR90
- Minimum Order Quantity: 1 Set
- Price: Negotiable
- Packaging Details: Standard Export Wooden Packing
- Delivery Time: 7-20 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 500 sets per month




Product Specification

- Name: Semi-Automatic Winding Machine
- Winding Shaft: Dimensions: 3mm(OD) X 127mm(L)
- Winding Speed: 0 - 170 RPM Adjustable
- Applicable To Cylindrical Batteries: $\Phi 35 \times L90$ mm Or Less
- Power: 25W 40W
- Working Voltage: 110/ 220V AC, 50/60Hz
- Highlight: **40W Cylindrical Cell Machine, 25W Cylindrical Cell Machine, Cylindrical Cell Semi Automatic Winding Machine**

Product Description

Semi-Automatic Winding Machine For Cylinder Cell

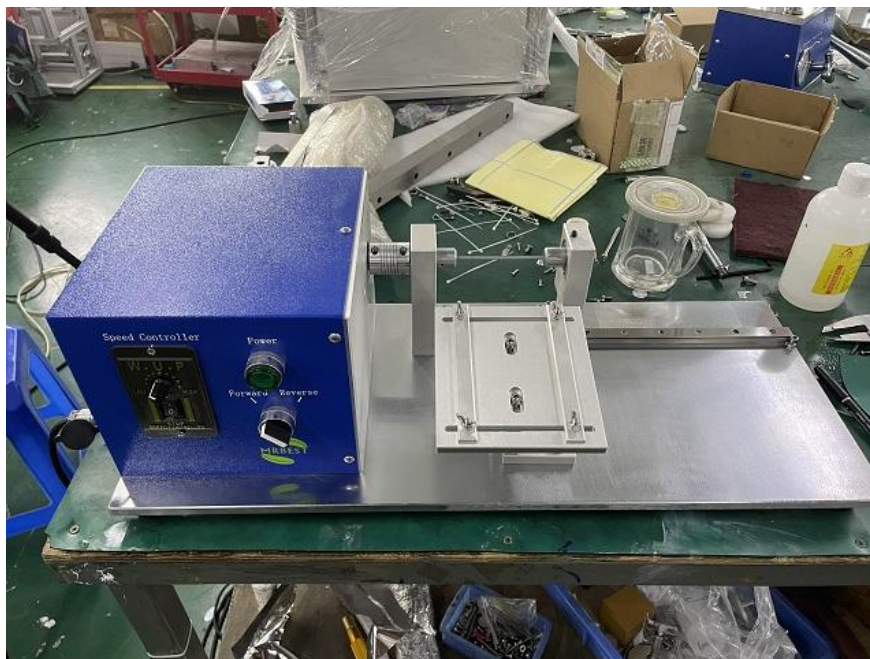

Model:MR-JR90

MR-JR90 is a semi-automatic winder for winding electrodes with separator together in the research of Li-ion cylinder batteries. It is suitable for supercapacitor, cylindrical battery, flexible packaging lithium battery pole piece winding, and the positive and negative electrode sheets and the diaphragm are wound into a battery core.

Features

- *The upper and lower, left and right, front and rear positions of the guide plate slot plate can be adjusted;
- *The winding roller ensures the winding tightness when the battery core is wound;
- * Increase the winding tail bracket to improve the winding accuracy of the battery core;
- * Winding can be reversed and reversed, winding stepless speed regulation;
- *The machine is small in size, exquisite in appearance and easy to operate;

Specifications:

Model	Semi-Automatic Winding Machine MR-JR90
Winding Shaft	Dimensions: 3mm(OD) x 127mm(L)
Winding Speed	0 - 170 RPM Adjustable
Suitable for cell size	Applicable to Flat Batteries: Length (20 ~ 100) * width (20 ~ 80) * thickness (0.5 ~ 10) according to customer selection. Applicable to Cylindrical Batteries: $\Phi 35 \times L90$ mm or less (replacement of wound flat batteries and cylindrical batteries need to be replaced)
Working Voltage	220V AC, 50/60Hz
Power	25W 40W
Product Dimensions	L550mm*310mm*280mm
Winding Mode	Switchable between clockwise and counterclockwise
Output	70-100EA/h, according to battery size and manual
Net Weight	25KG
Gross Weight	37kg
Package Size	720*340*240 mm
Application Notes	This machine can be used for cylinder battery with round winding shaft, and you can also choose the square winding shaft for pouch cell core winding, We will supply with the suitable winding accessories according to your battery model.
Warranty	One Year limited warranty with lifetime support Rusting and damage due to improper storage condition or maintenance is not covered by warranty

Our Advantages

1. Steady and high quality ! -cause we are a manufacturer of Lithium Battery Equipment, and we only focus on one thing that is make professional Lithium ion Battery Equipment for customer around the world.
2. Friendly use! all MRBEST Battery Equipment with teach manual and support live teaching via media.
3. Reliable factory! My factory located in Shenzhen city of China, support factory visit and video factory visit .

4. 1 year warranty plus lifetime technical support.

5.All the parts use on machine, in stock forever.

6. Powerful technical support, NOT TRADE COMPANY! We are professional on Lithium Battery Equipment, the chief engineer team have

more than 20 years experience on lithium battery area, so we can easy do diagnose on machine if customer have question.

7. 100% PATIENCE to all customers! Our patience not only before consult order, also after-sale service, one by one .



Shenzhen Meirui Zhida Technology Co., Ltd.



+86 19866156608



tina@szmrbest.com



lithiumbattery-machine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China