



2 In 1 Cylindrical Cell Battery Electrolyte Filling Machine Vacuum Standing Machine

Our Product Introduction

Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Certification: CE
- Model Number: MR-ZY200
- Minimum Order Quantity: 1 Set
- Price: Negotiable
- Packaging Details: Standard Export Wooden Packing
- Delivery Time: 7-20 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 500 sets per month




Product Specification

- Product Name: Electrolyte Filling And Vacuum Standing Machine
- Application: Electrolyte Filling & Vacuum Standing
- Suitable Battery: Cylindrical Cell
- Battery Size: 18650, 21700, 26650, 32650 Etc.
- Operation: PLC, Touch Screen Controlled
- Filling Accuracy: $\pm 1\%$
- Volume: 0.2ml~200ml
- Spitting Speed: 6ml/s Adjustable
- Highlight: **Cylindrical Cell Battery Electrolyte Filling Machine**
, 2 in 1 Battery Electrolyte Filling Machine,
Battery Vacuum Standing Machine

Product Description

2 in 1 Electrolyte Injection and Vacuum Standing for Pouch Cell Making

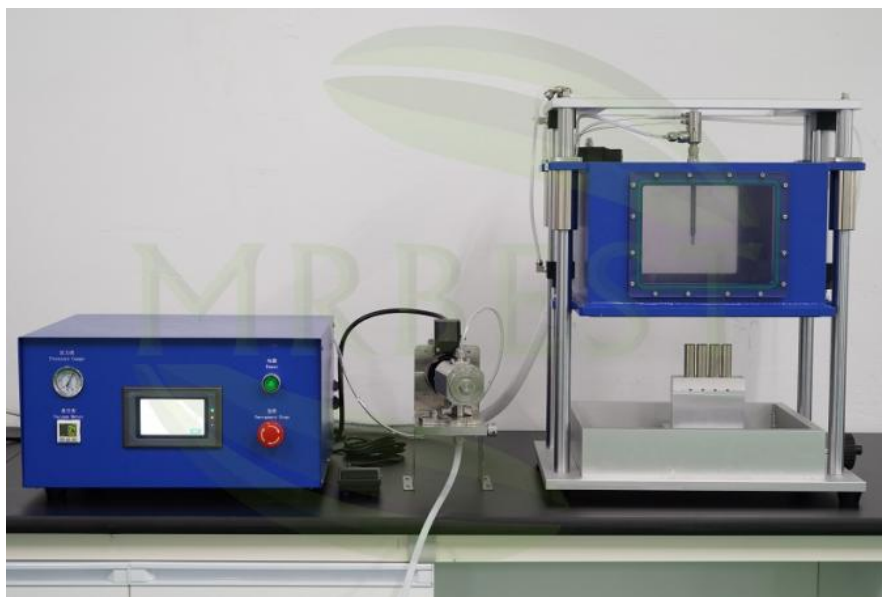

Model: MR-ZY200

It is used for electrolyte injection and vacuum standing process for battery. It adopts vacuum first, then liquid injection and vacuum standing. The electrolyte has high precision, absorption consistency and high reliability.

Features

- * One machine includes injection and diffusion functions;
- * High measurement accuracy and repeatability;
- * Injecting liquid after vacuuming, high efficiency, accurate accuracy, convenient and reliable operation;
- * Injection accuracy $\pm 0.5\%$, injection volume 0.2 ml ~ 200 ml;
- * The entrance and exit are connected by chemical resistant hoses;
- * Can be operated in a glove box or dry room;
- * The appearance is exquisite and beautiful, and the performance is stable;
- * PLC, touch screen operation, flexible parameters, high automation program;

Specifications

Model	Electrolyte Filling and Vacuum Standing Machine For Cylindrical Cell MR-ZY200
Working Voltage	AC110/220V optional
Application	Cylindrical cell
Battery Size	Cylinder Cases such as 18650, 21700, 26650, 32650 etc.
Working Station	4 (Customized according to Cylinder Cell)
Volume	0.2ml * 200mL filling, adjust according to filling pump
Filling Accuracy	$\pm 1\%$
Spitting Speed	6ml/s adjustable
Pipe Diameter	$\Phi 6\text{mm}$
Standing Time	Settable, max 9999min
Power	500W
Air Source	0.5~0.7MPa
Dimension	L510 * W400 * H650mm
Weight	90kg
Material	Key part is made of corrosion resistant 304SS, 316SS

Our Advantages

1. Steady and high quality ! -cause we are a manufacturer of Lithium Battery Equipment, and we only focus on one thing that is make professional Lithium ion Battery Equipment for customer around the world.
2. Friendly use! all MRBEST Battery Equipment with teach manual and support live teaching via media.
3. Reliable factory! My factory located in Shenzhen city of China, support factory visit and video factory visit .
4. 1 year warranty plus lifetime technical support.
5. All the parts use on machine, in stock forever.
6. Powerful technical support, NOT TRADE COMPANY! We are professional on Lithium Battery Equipment, the chief engineer team have more than 20 years experience on lithium battery area, so we can easy do diagnose on machine if customer have question.
7. 100% PATIENCE to all customers! Our patience not only before consult order, also after-sale service, one by one .



Shenzhen Meirui Zhida Technology Co., Ltd.



+86 19866156608



tina@szmrbest.com



lithiumbattery-machine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China