



Desktop Tape Casting Coater Equipment 800mm Adjustable length

Our Product Introduction

for more products please visit us on lithiumbatterymachine.com

Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Certification: CE
- Model Number: MR-TMH800
- Minimum Order Quantity: 1 Set
- Price: Negotiable
- Packaging Details: Standard Export Wooden Packing
- Delivery Time: 7-20 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 500 sets per month




Product Specification

- Name: Tape Casting Equipment 800mm Adjustable
- Doctor Blade: 150mm Fixed Width As Standard, Other Size Optional
- Coating Length: 800mm Maximum
- Max Heating Temperature: 150
- Heating Type: Top Heating
- Vacuum Pump: Built In Oil Free Vacuum Pump
- Highlight: **Desktop Tape Casting Coater,
Tape Casting Coater 800mm,
Desktop Tape Casting Equipment**

Product Description

Battery Vacuum Film Coater Top Heating Tape Casting Equipment 800mm Adjustable

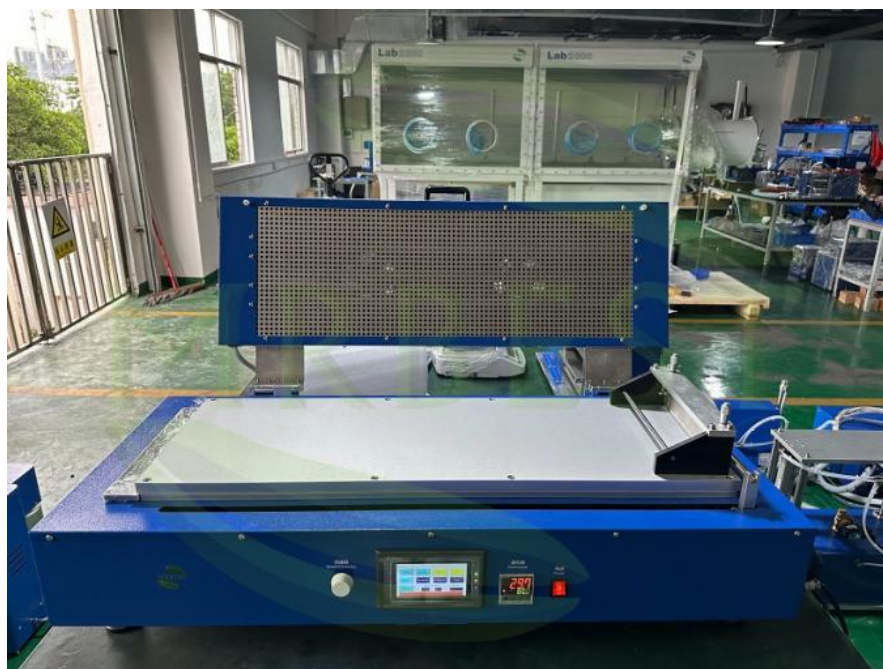

MR-TMH800 is a large desktop film tape casting machine with vacuum chuck, which widely used in all kinds film coating research, like ceramic films, crystal films, lithium battery electrode coating, etc. It is designed with top cover heating, the heating temperature up to 150 adjustable and digital display. The coating speed, coating stroke length, coating thickness adjustable. 800mm coating length makes it perfect for cylindrical cell electrode coating.

Features

- Touch screen operation, high automation.
- Vacuum aluminium chuck is designed for quick suction of substrate.
- Coating stroke length is adjustable.
- Coating speed can be set.
- 800mm coating length, perfect for cylindrical cell coating.

Technical Paramters

| | |
|---------------------------|--|
| Model | Adjustable Top Heating Vacuum Film Coating Machine MR-TMH800 |
| Power supply | AC110V/220V optional upon request |
| Max coating stroke length | 800mm adjustable (customized size is available) |
| Doctor blade | 150mm fixed with & adjustable width optional |
| Coating thickness range | 0.01~3.5mm adjustable |
| Heating temperature | Up to 150 adjustable, digital display |
| Vacuum chuck | L865 * W200 * H30mm |
| Vacuum pump | External connected |
| Coating speed | 0~200mm/s adjustable |
| Dimension | L900 * W310 * H330mm |
| Weight | 100kg |

Our Advantages

1. Steady and high quality ! -cause we are a manufacturer of Lithium Battery Equipment, and we only focus on one thing that is make professional Lithium ion Battery Equipment for customer around the world.
2. Friendly use! all MRBEST Battery Equipment with teach manual and support live teaching via media.
3. Reliable factory! My factory located in Shenzhen city of China, support factory visit and video factory visit .
4. 1 year warranty plus lifetime technical support.
- 5.All the parts use on machine, in stock forever.
6. Powerful technical support, NOT TRADE COMPANY! We are professional on Lithium Battery Equipment, the chief engineer team have more than 20 years experience on lithium battery area, so we can easy do diagnose on machine if customer have question.
7. 100% PATIENCE to all customers! Our patience not only before consult order, also after-sale service, one by one .



Shenzhen Meirui Zhida Technology Co., Ltd.



+86 19866156608



tina@szmrbest.com



lithiumbatteryemachine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China