



## Manual Battery Manufacturing Machine Max Pressure 8T Coin Cell Crimping Machine

Our Product Introduction

for more products please visit us on [lithiumbatterymachine.com](http://lithiumbatterymachine.com)

### Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Certification: CE
- Model Number: MR-SF120
- Minimum Order Quantity: 1 Set
- Price: Negotiable
- Packaging Details: Standard Export Wooden Packing
- Delivery Time: 7-15 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 500 sets per month




### Product Specification

- Name: Coin Cell Crimping Machine
- Standard Disassembling Die: CR20XX Crimping Die
- Operation: Manual
- Pressure: Max. 8T
- Dimension: 223 \* 170 \* 325mm
- Weight: 25kgs
- Highlight: **Manual Battery Manufacturing Machine, Battery Manufacturing Machine 8T, Manual Coin Cell Crimping Machine**

## Product Description

### Lithium Ion Battery Assembly Line Coin Cell Crimping Machine

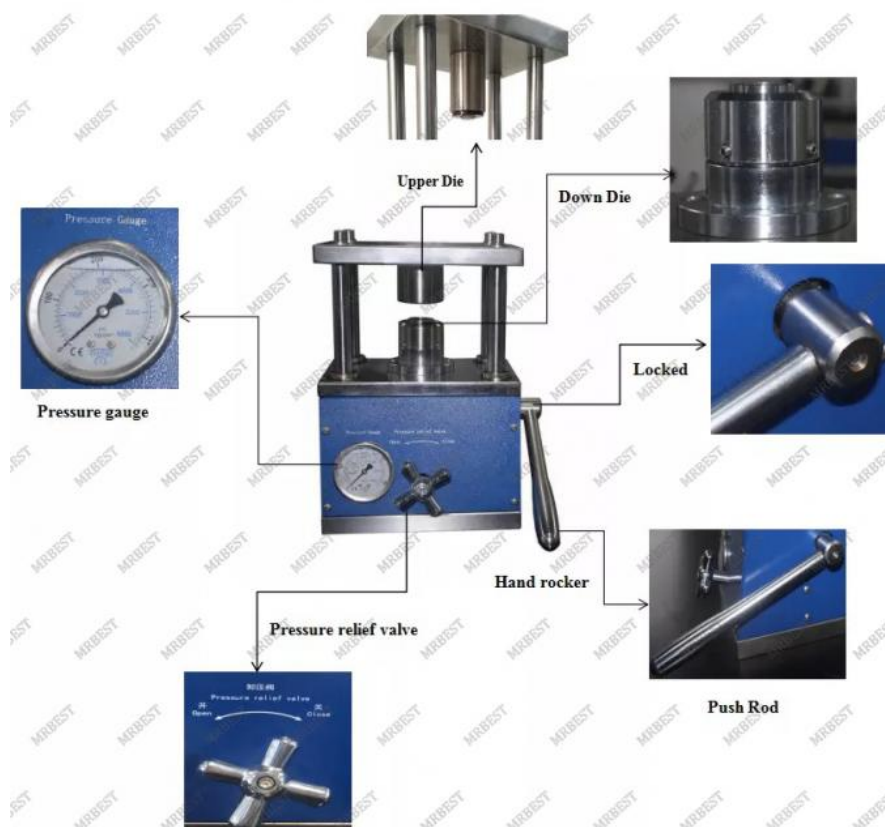

#### Features:

The MR-SF120 compact hydraulic crimping machine is used for all types of coin cell cases crimping, such as CR2032, CR2450, etc. CR20xx series crimping die is included as standard, the other crimping die set is optional. Coin cell disassembly die and tablet pressing die can be optional.

#### Features

- Stainless steel crimping die ,anti-corrosion and durable.
- It's desinged with crimping height limitation to avoid damage.
- Embedded pressure gauge designed to observe and accurately control sealing pressure.
- No liquid leakage no vibration during battery sealing.
- Different die set can be optional, such as CR20xx /CR24xx crimping die, disassembly die, tablet pressing die etc.
- Small volume, convenient operation, it can operate inside the glove box.

#### Technical Parameter

Brand name	MRBEST
Model	MR-SF120
Standard crimping die	CR20xx crimping die , other size crimping die is optional
Operation	Manual
Operation force of hand rocker	< 5.5kg
Dimension	L232xW165xH320mm
Weight	25kg

#### Our Advantages

1. Steady and high quality ! -cause we are a manufacturer of Lithium Battery Equipment, and we only focus on one thing that is make professional Lithium ion Battery Equipment for customer around the world.
2. Friendly use! all MRBEST Battery Equipment with teach manual and support live teaching via media.
3. Reliable factory! My factory located in Shenzhen city of China, support factory visit and video factory visit .
4. 1 year warranty plus lifetime technical support.
- 5.All the parts use on machine, in stock forever.
6. Powerful technical support, NOT TRADE COMPANY! We are professional on Lithium Battery Equipment, the chief engineer team have more than 20 years experience on lithium battery area, so we can easy do diagnose on machine if customer have question.
7. 100% PATIENCE to all customers! Our patience not only before consult order, also after-sale service, one by one .



**Shenzhen Meirui Zhida Technology Co., Ltd.**



+86 19866156608



tina@szmrbest.com



lithiumbatteryemachine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China