




## CR2032 SS316 Coin Cell Battery Case Button Cell Battery Storage Case

### Our Product Introduction

#### Basic Information

- Place of Origin: China
- Brand Name: MRBEST
- Model Number: CR2032
- Minimum Order Quantity: 100 Sets
- Price: Negotiable
- Packaging Details: Standard Export Carton Packing
- Delivery Time: 3-15 working days
- Payment Terms: T/T, Western Union, MoneyGram
- Supply Ability: 5000000 sets per month

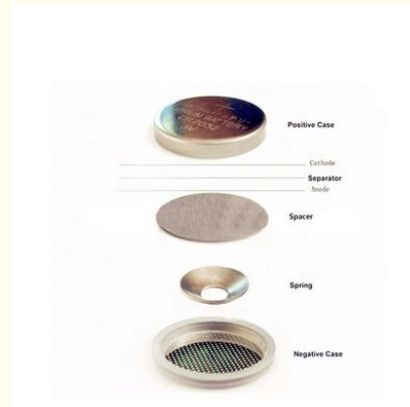

#### Product Specification

- Name: CR2032 Coin Cell Cases
- Shape: Button
- Material: SS316
- Battery Size: 20 Mm \*3.2 Mm
- Sealing Gasket: PP
- Full Set Include: Positive Case, Negative Case, Spring And Spacer
- Highlight: **SS316 Coin Cell Battery Case,  
SS316 CR2032 Storage Case,  
CR2032 Button Cell Battery Storage Case**

**CR2032 Coin Cell Cases for Battery Research**




CR2032/ CR2025/ CR2016 button cells cases, made of stainless steel 304 or 316 with PP sealing O-ring


1 set include positive case, negative case, conical spring and spacer.

Dimensions (Dia x Height)	20 mm x 3.2 mm
Weight	1KG
Material	Casing: SS304or SS316, please choose according to your need. Sealing Gasket: PP The thickness of the SS304/316 for both anode and cathode case is 0.25 mm +/- 0.02 mm.
Application Note	After perfectly crimping, the External Height should be around 3.0mm. The diameter of the inner ring of the plastic gasket for the coin cell 2032 is around 16.39mm. Usually, a case does not need to clean before crimping, but if you do need to clean the case, please put in ethanol for 4-6 hrs, and use Oven to dry several hours, (please set the oven to 30C, if it has ORING.)
Model Choose	CR2032/ CR2025/ CR2016

**Application:**

It is excellent for developing new rechargeable batteries and battery electrodes

Coin Cell Case Suit			
Product	Specification	Material	Picture
Coin Cell Case (Anode/ Cathode Case)	CR/LIR 2032		
	CR/LIR 2025		
	CR/LIR 2016		
Spring	Conical Spring	Stainless Steel SS304 or SS316	
	Wave Spring		

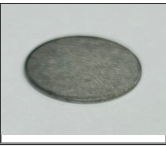Spacer	15.8*0.5mm 15.8*1.0mm	
--------	--------------------------	--



**Shenzhen Meirui Zhida Technology Co., Ltd.**



+86 19866156608



tina@szmrbest.com



lithiumbattery-machine.com

104 Building 6, Second Industrial Zone, Shanmen Community, Yanluo Street, Baoan District, Shenzhen China